


Headlights

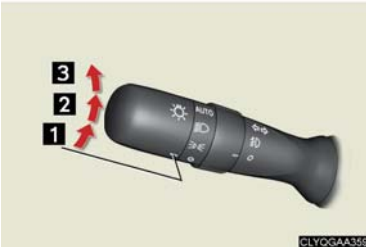

- 1** The instrument panel, side marker, parking, tail and license plate lights turn on.
- 2** The headlights and all lights listed above turn on.
- 3** The headlights and parking lights turn on/off automatically in accordance with ambient light levels.



To engage the high beams, push the lever forward.
To flash the high beams, pull the lever and hold.

n AFS (Adaptive Front-lighting System) (if equipped)

AFS improves visibility on curves by automatically adjusting the horizontal orientation of the headlights in accordance with vehicle speed and the degree of the tire angle that are controlled by steering input.




To cancel the system, press the AFS OFF switch.

- 1 OFF
- 2 ON

The indicator comes on when the system is off.

Fog Lights

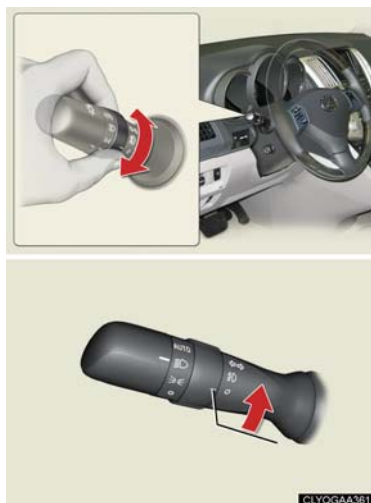

The fog lights can be used only when the headlights (low beam) are on.

Windshield Wipers and Washer


Intermittent wiper with interval adjuster (if equipped)



- | | | |
|---|---|------------------------|
| 1 | ○ | Off |
| 2 | ⏏ | Intermittent operation |
| 3 | ▼ | Low speed |
| 4 | ▼ | High speed |
| 5 | △ | Single wipe |



Intermittent operation: Wiper interval can be adjusted by turning the band.

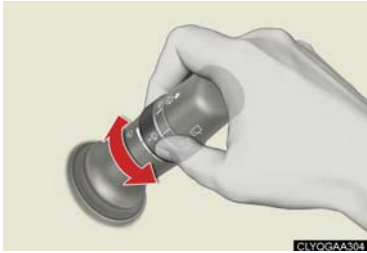

To spray washer fluid, pull the lever. The wipers will operate automatically.



n Rain-sensing windshield wipers (if equipped)



- 1 ○ Off
- 2 AUTO Automatic operation
- 3 ▼ Low speed
- 4 ▼ High speed
- 5 ▲ Single wipe



Automatic operation: Sensitivity can be adjusted by turning the band.



To spray washer fluid, pull the lever. The wipers will operate automatically.

Rear Window Wiper and Washer



- 1 Off
- 2 Intermittent window wiper operation
- 3 Normal window wiper operation
- 4 Washer/wiper dual operation
- 5 Washer/wiper dual operation



Headlight Cleaner (If Equipped)



The headlight cleaner can be used only when the engine switch is in the ON position and the headlights are on.

Rear Window and Outside Rear View Mirror Defogger, and Windshield Wiper De-icer



To defog the rear window and the outside rear view mirrors, press the button.

Press again to cancel.

On vehicles for Canada, the windshield wiper de-icer will operate simultaneously with defoggers.

The system turns off automatically after 15 minutes.

Instrument Panel Light Control



1 To dim: turn the knob counterclockwise.

2 To brighten: turn the knob clockwise.



Multi-display Light Control



To adjust the brightness of the multi-display light, press the button repeatedly until the desired brightness is obtained.